



EDSWG/A Quickstart Guide

Publish Date:
June 8, 2016

The EDSWG Wireless Keypad will only work with NICE radio receivers.

FACTORY CODES:

- Channel button A is **1 1**
- Channel button B is **2 2**
- Channel button C is **3 3**

TRANSMITTING:

Press the code, then the channel button

**Example: 1 1 A* will transmit on channel A

**Note:* The same code can be programmed for each channel.

Note:* **The keypad will transmit as long as the channel button is held down.

MODE 1 RECEIVER PROGRAMMING:

Mode 1 = Button A is receiver channel 1, button B is receiver channel 2 and button C is receiver channel 3

OXI/A

- i. **Press and hold the learn button on the OXI/A receiver until the light comes on solid and release**
- ii. **On the keypad, press 1 1 and then hold A until the receiver light goes out**
- iii. **Programming is complete for buttons A, B and C**

318N (only buttons A and B will function)

- i. **Press and release the learn button on the 318N receiver**
- ii. **Immediately after releasing the learn button, on the keypad press 1 1 and then hold A until the receiver light goes out**
- iii. **Release A and immediately press A again until the light on the receiver comes back on and flashes**
- iv. **Programming is complete for all buttons A and B**

CHANGING CODES:

Codes are configurable from **1 to 8 digits in length**

STORE CODES IN A SAFE PLACE ! Resetting to default can only be done at the factory.

- i. **Press and hold 0**
- ii. **While holding 0, press and release A**
- iii. **Release 0**
- iv. **Press the existing code**
- v. **Press A**
- vi. **Press the new code**
- vii. **Press A**
- viii. **Press the new code**
- ix. **Press A**

**Note:* The same procedure is used to program all channel buttons

TO USE THE KEYPAD WITHOUT A CODE:

This allows the keypad to work as a simple entry/exit button with a single press of the channel button

Deactivate code for channel button A, B or C

This example uses channel button A.

- i. **Press and hold 0**
- ii. **While holding 0, press and release A**
- iii. **Release 0**
- iv. **Press the existing code**
- v. **Press A**
- vi. **Press A**
- vii. **Press A**

Activate code for channel button A, B or C

This example uses channel button A.

- i. **Press and hold 0**
- ii. **While holding 0, press and release A**
- iii. **Release 0**
- iv. **Press A**
- v. **Press your new code**
- vi. **Press A**
- vii. **Press your new code again**
- viii. **Press A**