

QUICKSTART "BASIC" GUIDELINES FOR MODEL 1603 - DOWN LOOP WITH ENTRY LANE TRAFFIC ONLY




120 Glasgow Avenue
Inglewood, California 90301
U.S.A.


Model 1603 is intended for installation only on barrier gates used for vehicles.
Pedestrians must be supplied with a separate access opening. For safety and installation instructions, please refer to the owner's manual.

It is recommended that the "Spike" sections not exceed 12 feet (Four 3-Ft spike sections) for proper operation.

Refer to Section 3 Auto Spike System Installation in the manual for further information.

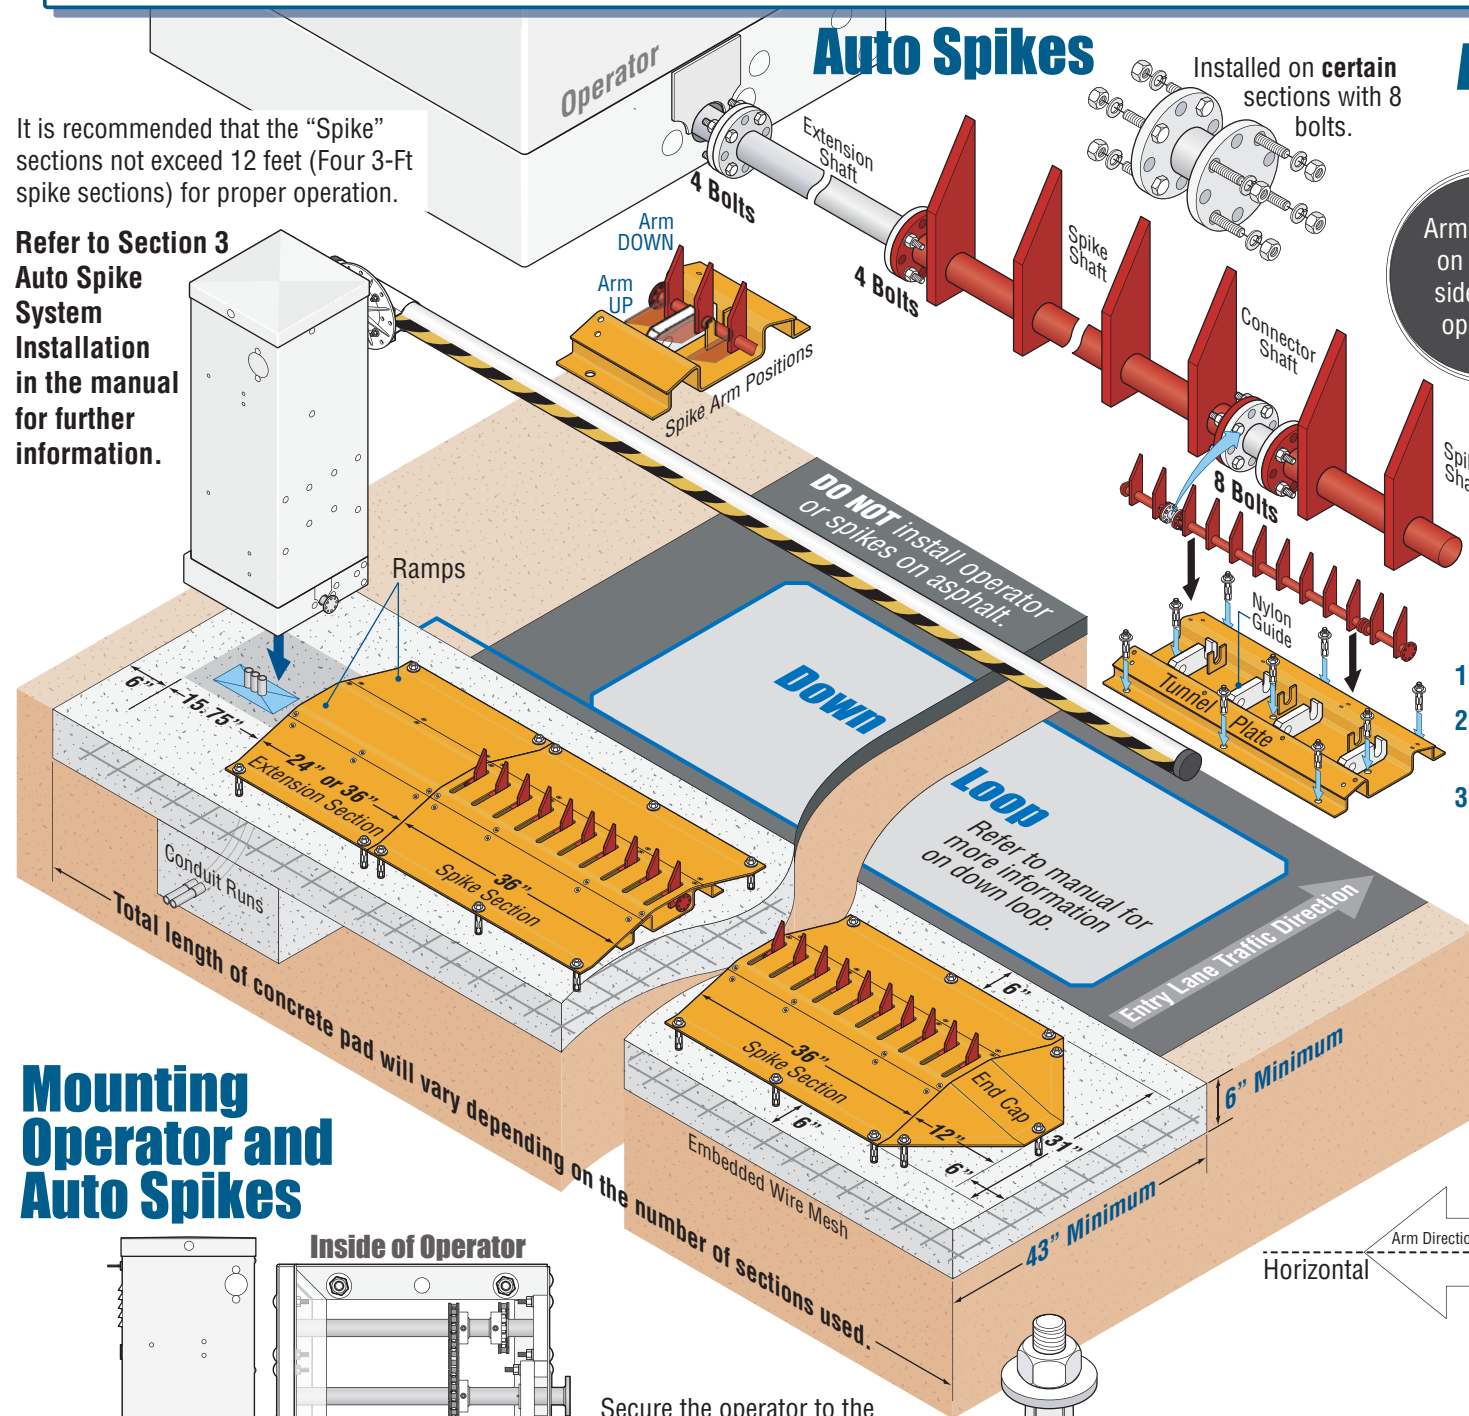

Limit Magnets have been pre-set at the factory to rotate arm 90°. No adjustment is necessary.

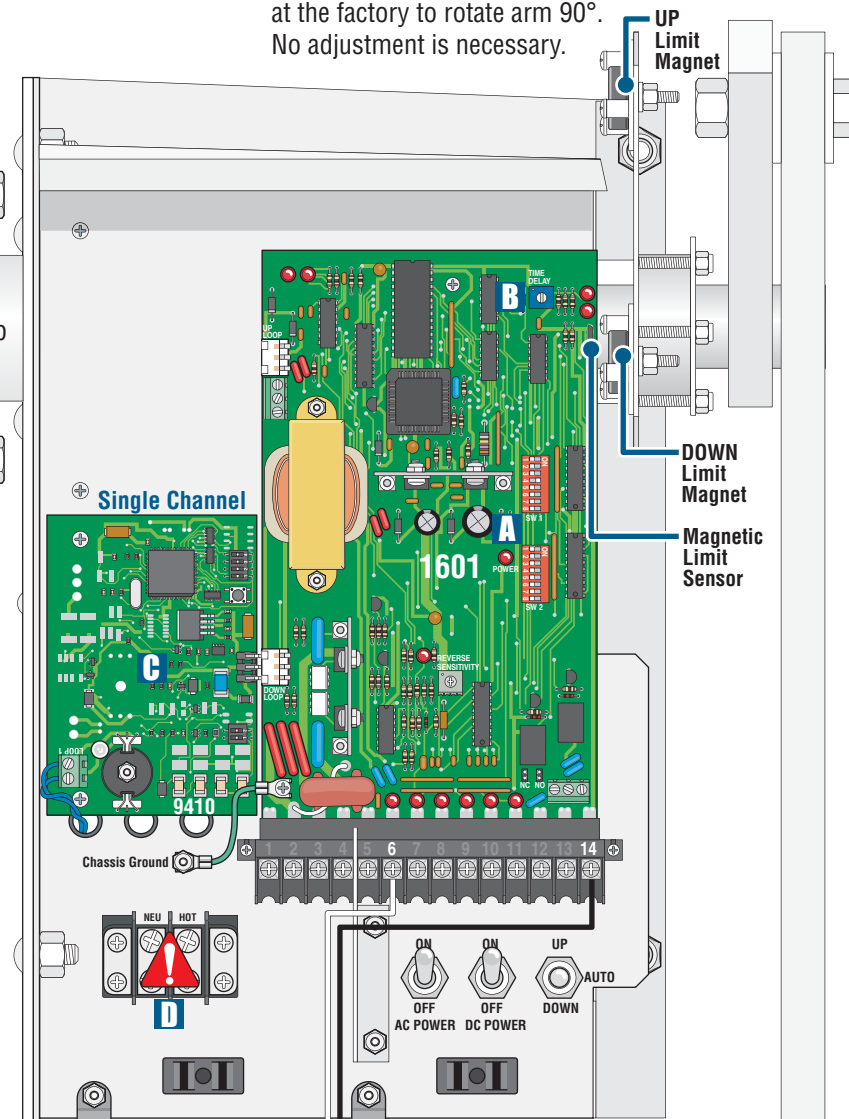

Board Adjustments

A

1	ON
2	ON
3	ON
4	ON
5	ON
6	ON
7	ON
8	ON

SW1

1	ON
2	ON
3	ON
4	ON
5	ON
6	ON
7	ON
8	ON

B

Auto Close Timer

When SW1, switch 7 is turned ON, automatic timer can be set from 1-59 seconds to automatically lower arm.


Note: The auto close timer CAN be used with down loops. Refer to the owner's manual for more info.

Loop Detectors

C Not included - Refer to the Owner's manual and Loop Information Manual (available from www.dkaccess.com) for more information on loops and loop detectors.

VAC Connection

OPERATOR MUST BE PROPERLY GROUNDED!
Tip: It is recommended that a surge suppressor be installed on the high voltage power lines.

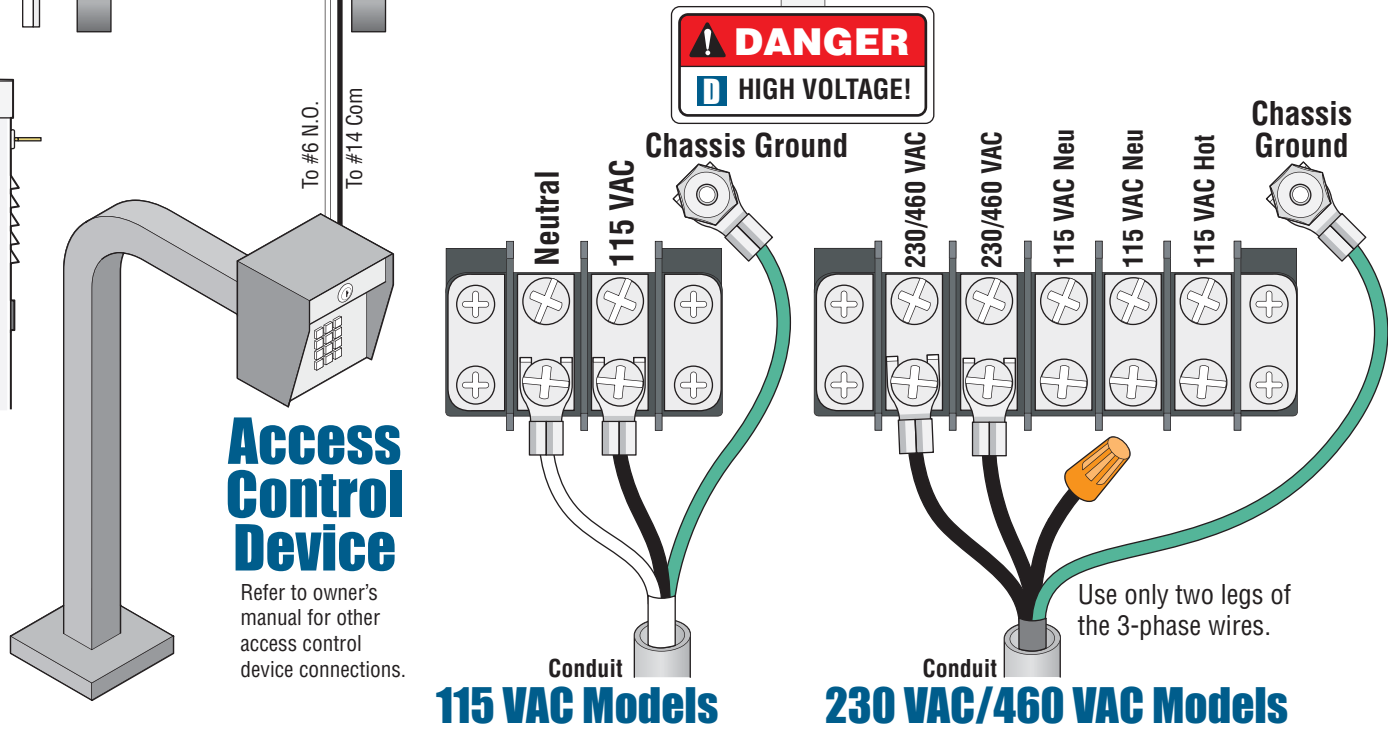

Spike Sections MUST lay FLAT and LEVEL on concrete to operate properly!