


QUICKSTART "BASIC" GUIDELINES FOR MODEL 9500 "FULL OPEN"

Model 9500 is intended for installation only on sliding gates used for vehicles.

Pedestrians must be supplied with a separate access opening. For safety and installation instructions, please refer to the installation/owner's manual.



120 Glasgow Avenue
Inglewood, California 90301
U.S.A.


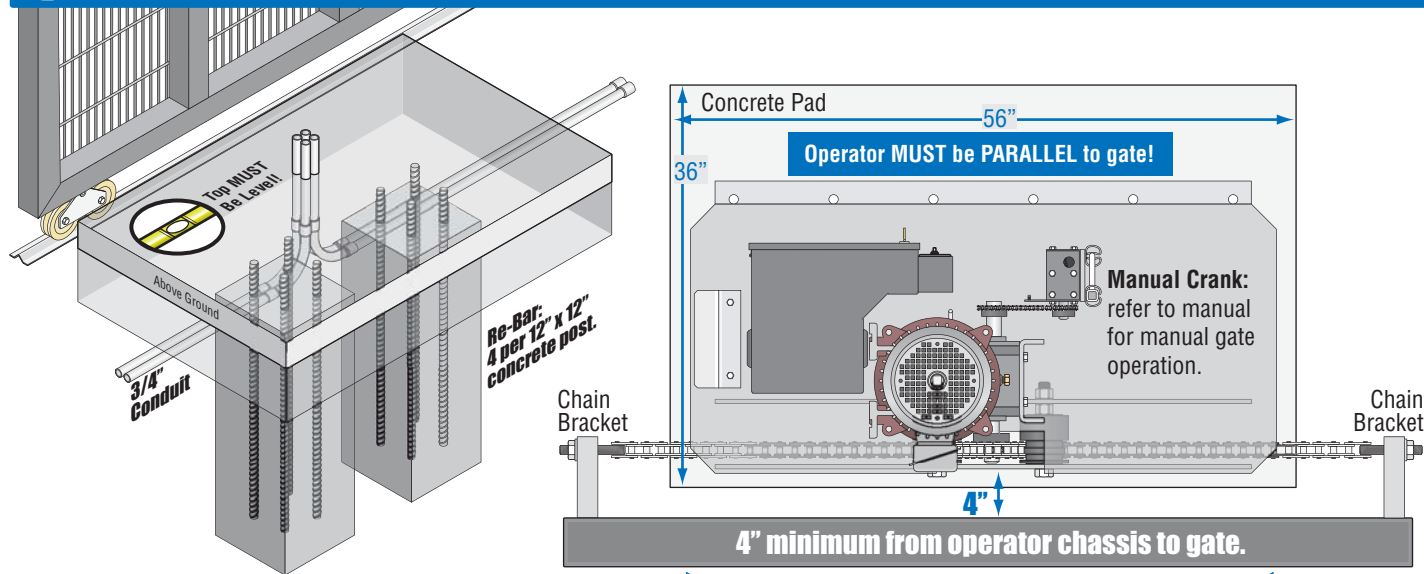


C Opening direction using OFF SW 1, switch 1 DIP setting.

C Opening direction using ON SW 1, switch 1 DIP setting.

Chain brackets MUST align with idler wheels so chain stays PARALLEL to gate!

Chain brackets MUST be mounted so the chain remains the same height as it is on the idler wheels!

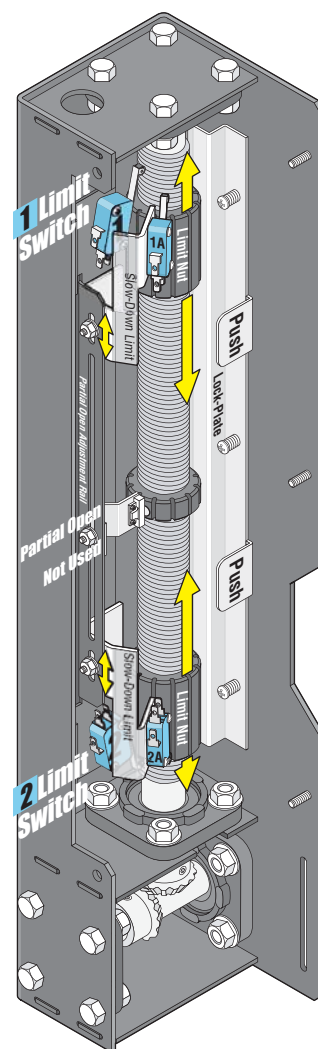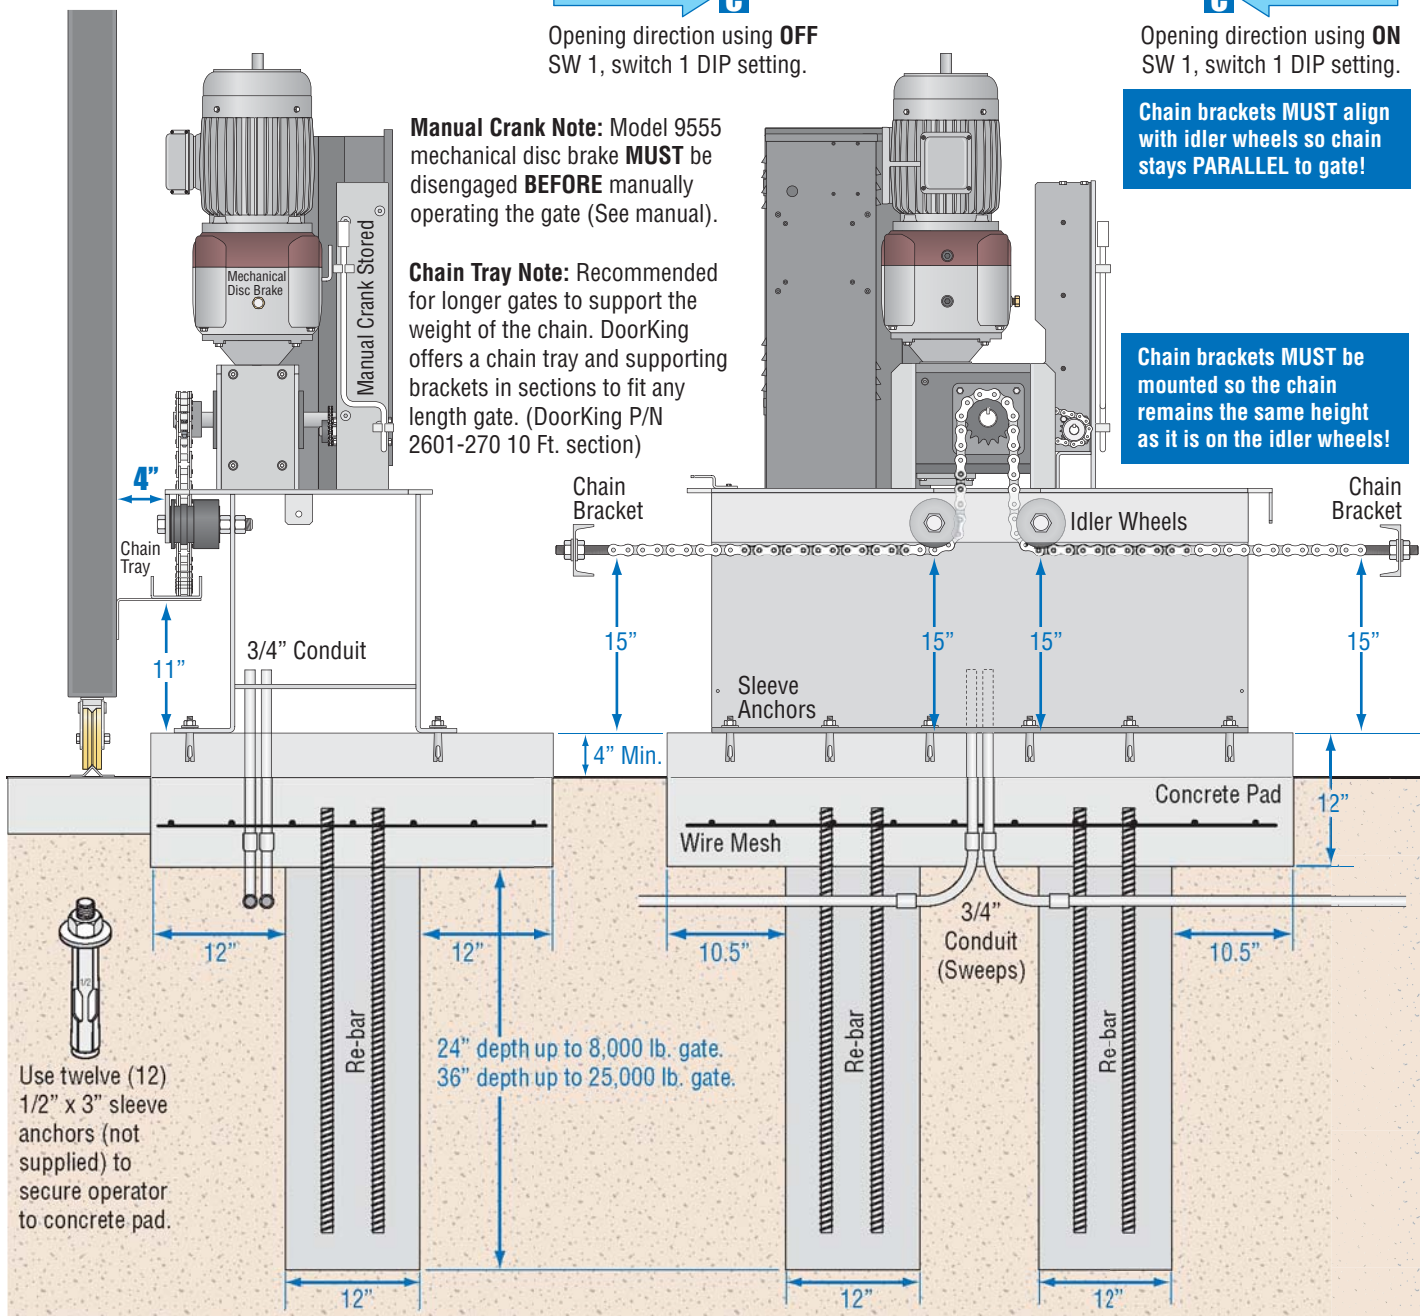


Limit Switches

With power OFF, push and hold the lock plate down where shown to adjust the Open and Close limit nuts.

After adjusting the limit-nuts, be sure that the lock-plate is engaged in the slots on the limit-nuts to prevent them from rotating. The slow-down limits will move up or down 3/4 inch. **DO NOT** remove the slow-down limit assembly from the 3/4 inch slot and re-attach it in the longer slot on the partial open adjustment rail to gain further adjustment. **This will cause mechanical damage to the switch assembly when the operator is activated.**

Turn power ON and activate the gate operator. Re-adjust the limit nuts as necessary for full-open and full-close gate travel. After you are satisfied with the gate limit settings, the speed control knob can then be adjusted to personal preference.

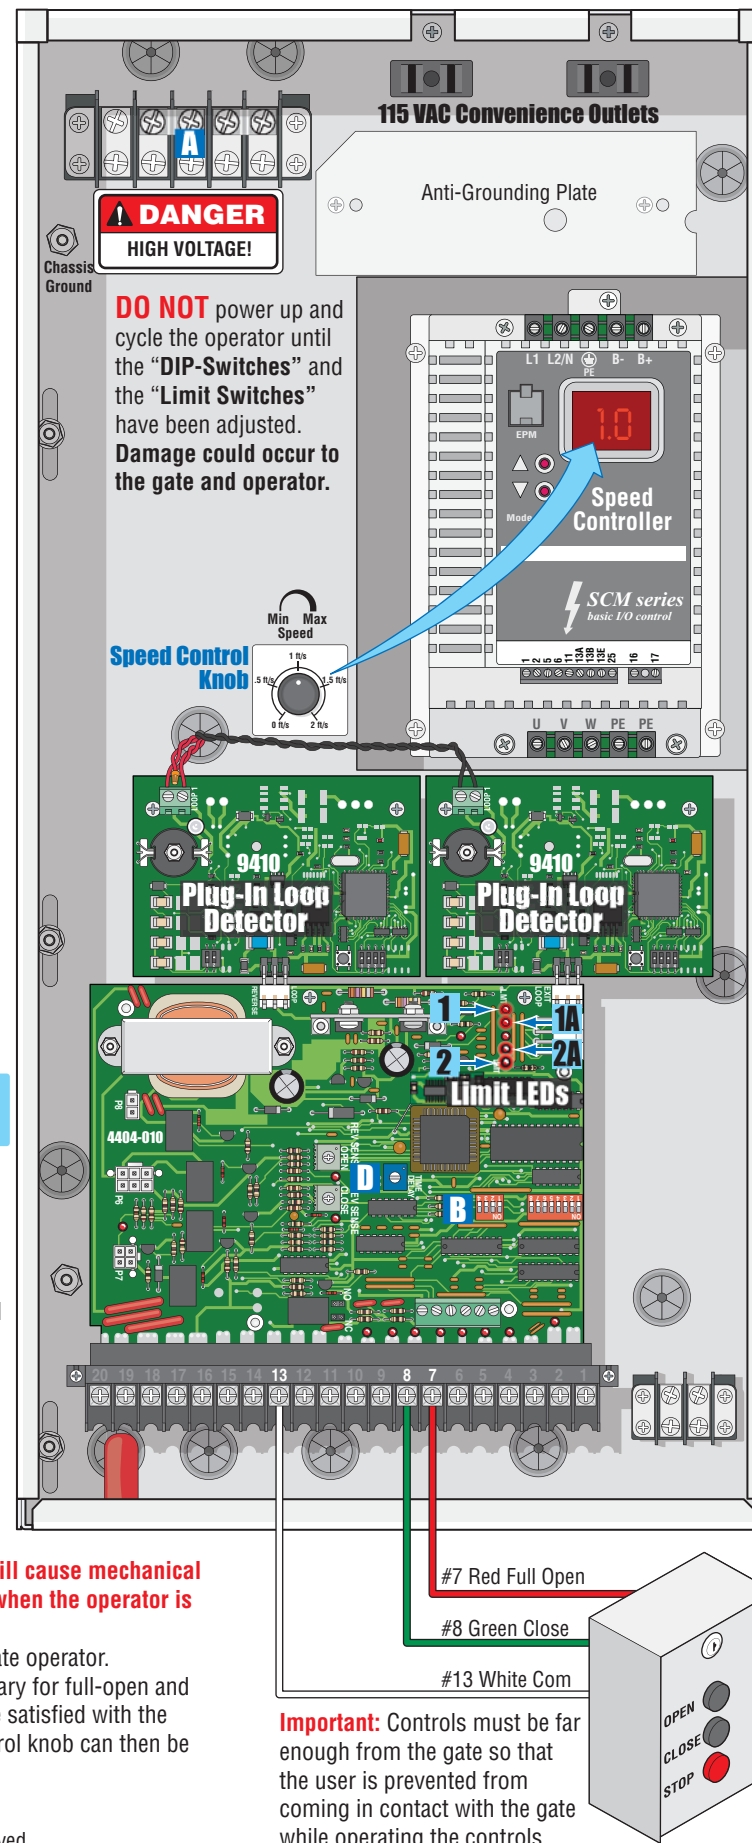


Important: Controls must be far enough from the gate so that the user is prevented from coming in contact with the gate while operating the controls.

High Voltage Connection

GATE OPERATOR MUST BE PROPERLY GROUNDED!!


Tip: It is recommended that a surge suppressor be installed on the high voltage power lines.

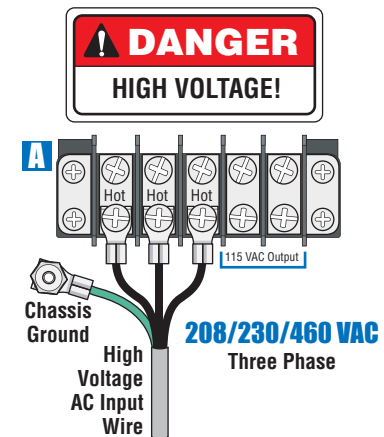

Check polarity: Position the gate half way open. Give open command and while gate is opening, activate the appropriate limit switch with your finger. Gate should STOP. If it does not, activate the other limit switch. If this STOPS the gate, AC power wires must be changed (Reverse the connection of any 2 wires and re-check limits).

DIP-Switches

SW 1 and 2 are Upside-Down on Circuit Board.

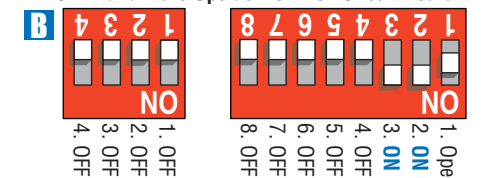

Auto-Close Timer



Plug-In Loop Detectors

Not included - Refer to the Installation/Owner's manual AND Loop Information Manual (available from www.dkaccess.com) for more information on loops and plug-in loop detectors.

Important Note: DoorKing highly recommends that loops and loop detectors are installed with this slide gate operator. A loop detection system will prevent the gate from automatically opening or closing on a vehicle when it is in the gate's path.

3-Button Control Station

Not included - Use ONLY DoorKing's 3-button control station. Stand alone box shown.

Stand Alone Box (Exterior) - P/N 1200-006
Interior (fits in single gang box) - P/N 1200-007