






USER GUIDE

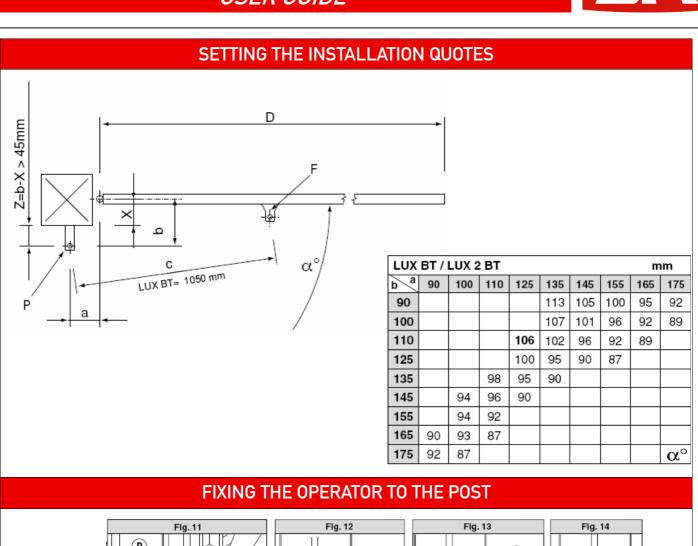

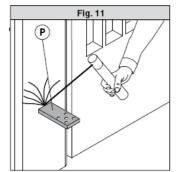

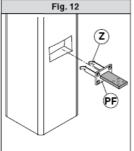


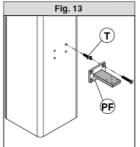

 




Adjustable rear bracket for LUX BT

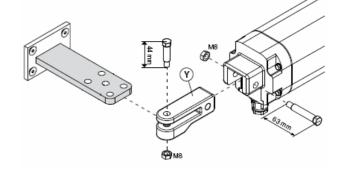




USER GUIDE

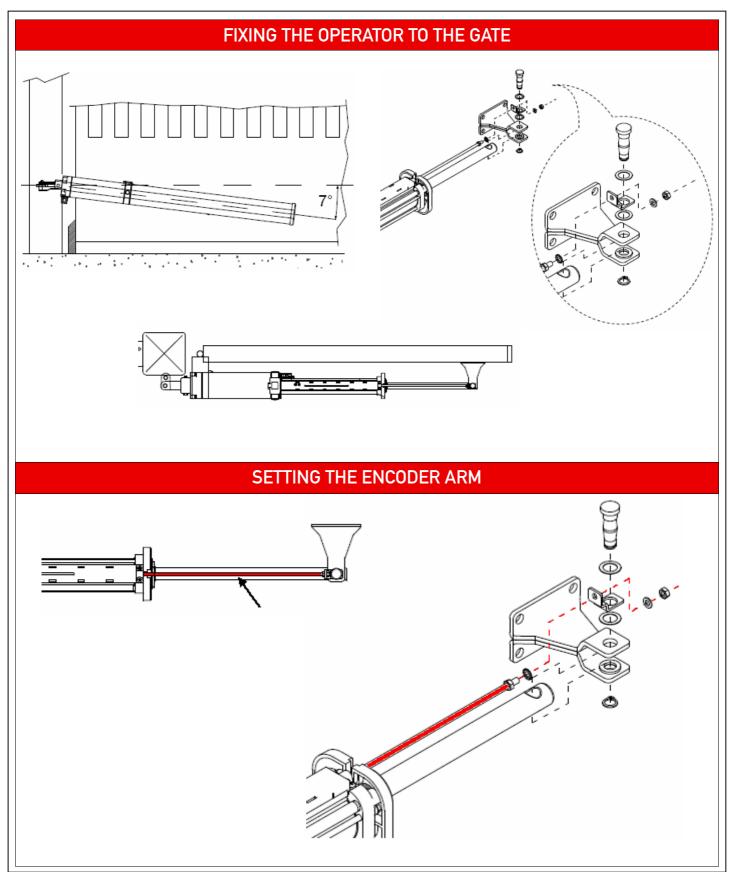





USER GUIDE


INSTALLING THE PISTON COVER

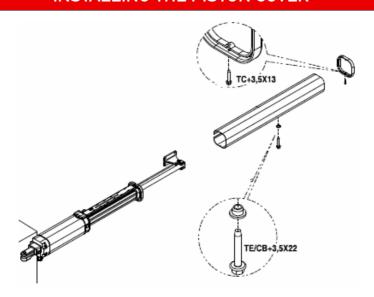


CABLING THE OPERATOR AND THE CONTROL BOARD

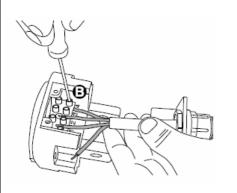

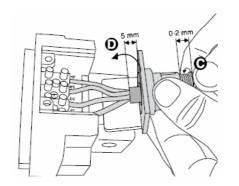


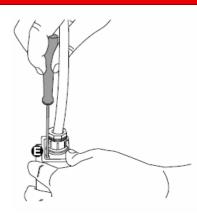

INSTALLING THE ELECTRIC LOCK (LUX BT)

 

 D121017 - ECB SX D121016 - ECB DX D121018 - ECB VERTICAL Horizontal (Left and Right), Vertical,





D111761 - ME BT Control board for electric lock




USER GUIDE


SETTING THE HYDRAULIC BLOCKS (LUX BT 2B)

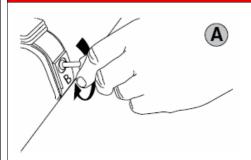

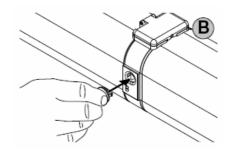


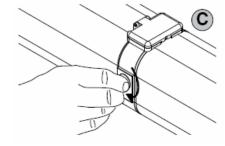


MANUAL RELEASE WITH KEY (LUX BT e LUX BT 2B)

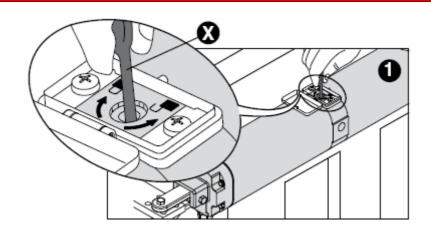

OTHER ACCESSORIES

 


P125005 - BT BAT Battery back up kit

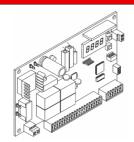

D113715 00002 - LIBRA C LX Control board



 D113686 00001 - LAMPO AI 24V 24V flashing light with built in antenna




P111408 - SCS WIE Control board to connect Wiegand accessories



N999417 - CABLE LUX BT 100 m Power cable for LUX BT



 D113719 00003 - RAY X 24V 24 V flashing light with built in antenna



P111376 - SCS 1 Control board for serial connection