


Linear ACCESS

AM-KP

Access Control Keypad

Installation Instructions

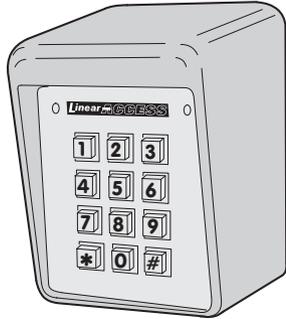

Linear

(760) 438-7000 • FAX (760) 438-7043
 USA & Canada (800) 421-1587 & (800) 392-0123
 Toll Free FAX (800) 468-1340
 www.linearcorp.com

INTRODUCTION

The AM-KP keypad is designed for use with Linear's AM/II access control system. The keypad is housed in a rugged cast aluminum enclosure. The die-cast keys have bright, easy-to-read yellow graphics. Each key has a positive tactile "click" feel when pressed. An internal sounder signals when a key is pressed.


The keypad can be mounted to a pedestal or directly to a wall. A keylock secures the keypad to the mounting backplate.

An incandescent panel lamp lights the keypad for nighttime use. Red, green and yellow indicators show power, access and lockout conditions.

The AM-KP is normally powered from the AM/II control, or can be powered locally from a 12 VDC power supply. Robust static and lightning protection circuits safeguard the keypad's electronics.

A rotary switch selects the keypad's device address. Each device connected to the AM/II must be set to a different device address.



1. AM-KP FEATURES

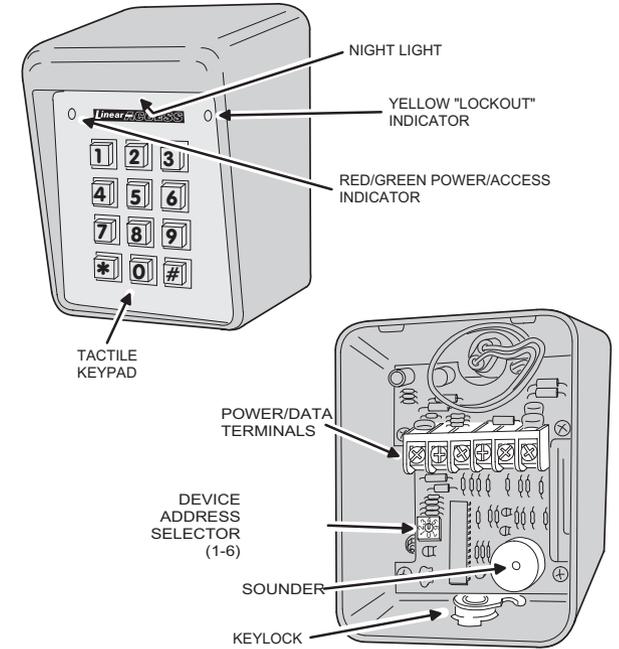



2. PLAN INSTALLATION

PLAN THE LOCATIONS FOR CONTROL AND REMOTE DEVICES

PLAN CABLE RUNS BETWEEN CONTROL AND REMOTE DEVICES

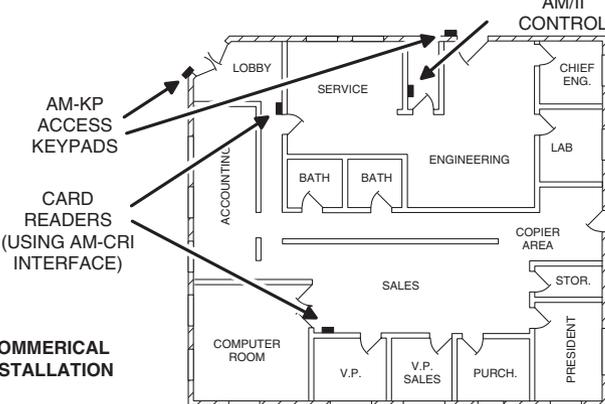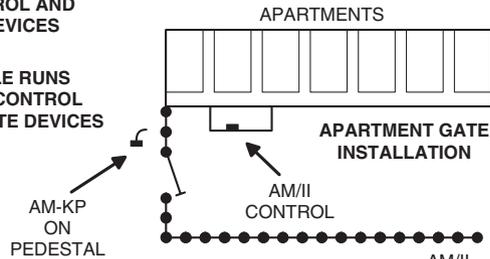


3. MOUNT BACKPLATE

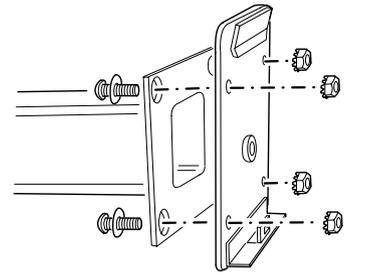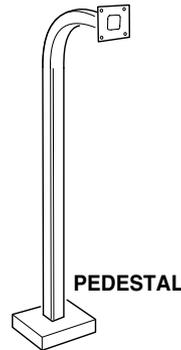

WALL MOUNTING

USE CONCRETE WEDGE ANCHORS OR MOLLY ANCHORS

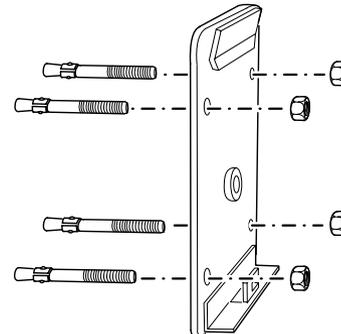


4. ROUTE CABLE

EACH AM-KP KEYPAD EQUALS 9 LOAD UNITS

CABLE LENGTH FORMULA FOR EACH KEYPAD USED IN SYSTEM


CABLE RUN	CABLE TYPE	FORMULA
300 FEET MAXIMUM	BELDEN 9931 (24 AWG)	FEET x LOAD UNITS < 3,000 MAXIMUM
500 FEET MAXIMUM	WEICO 9405 (20 AWG)	FEET x LOAD UNITS < 10,000 MAXIMUM

HOMERUN WIRE EACH KEYPAD (1000 FEET WIRE MAXIMUM ALLOWED IN SYSTEM)

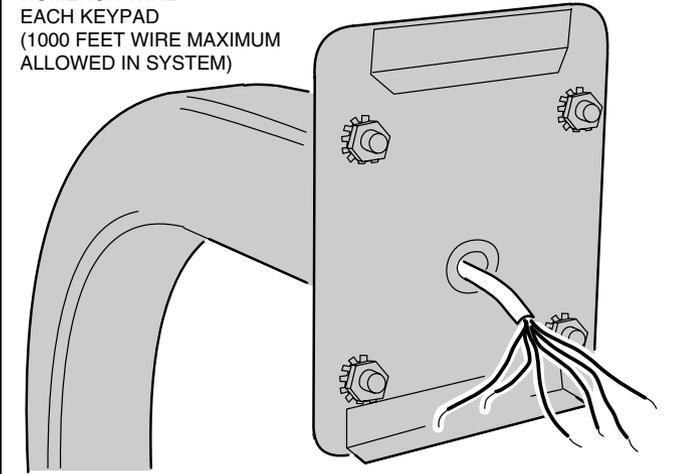


INSTR. AM/II-KP
 Linear P/N: 211560 D
 Material: 20 Lb. Mead Bond
 Size: 8.500" x 11.000"
 Ink: Black
 Scale: 1-1
 Side 2 of 2


5. CONNECT CABLE

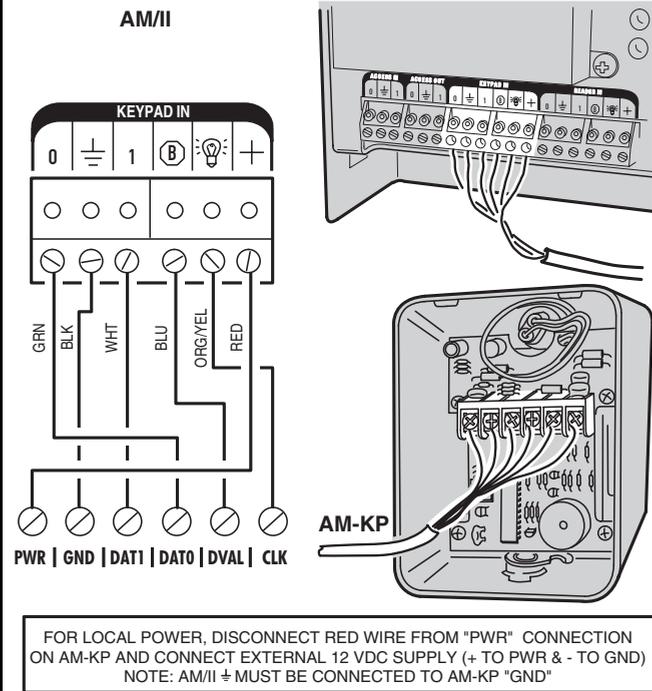

6. SET DEVICE ADDRESS

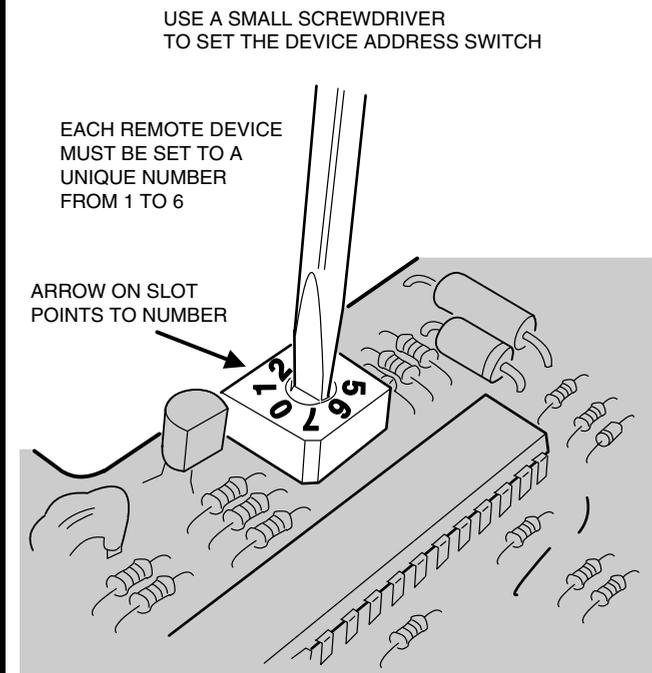


7. SECURE & LOCK CASE

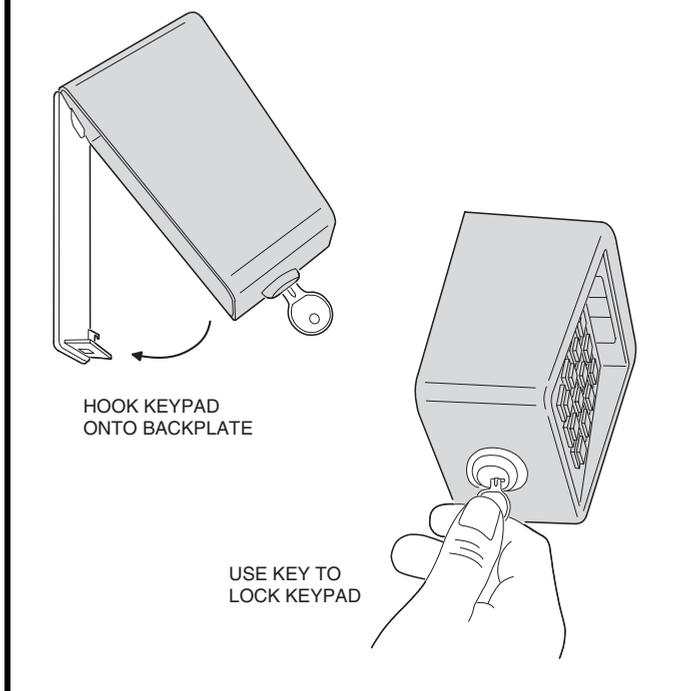

8. PROGRAM SYSTEM

PROGRAM THE AM/II TO CONFIGURE THE KEYPAD(S) AND SET THE ENTRY CODES

REFER TO THE AM/II PROGRAMMING INSTRUCTIONS FOR DETAILS

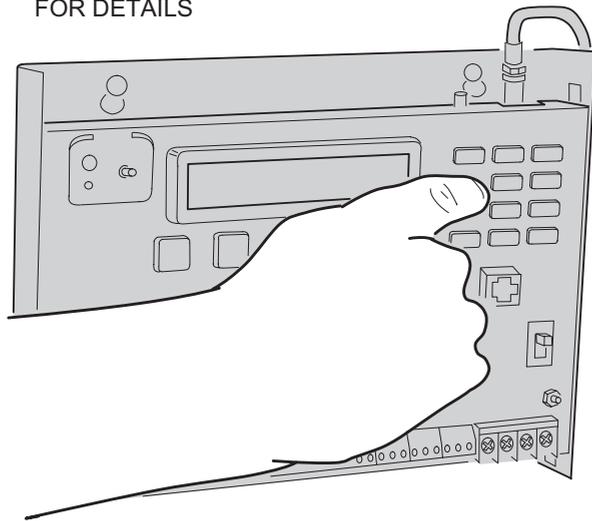

9. TEST KEYPAD

1. RED INDICATOR SHOULD BE LIT
2. ENTER VALID CODE
3. RED INDICATOR SHOULD TURN GREEN AND PROGRAMMED RELAY IN AM/II SHOULD ACTIVATE



LINEAR LIMITED WARRANTY

This Linear product is warranted against defects in material and workmanship for twelve (12) months. The Warranty Expiration Date is labeled on the product. **This warranty extends only to wholesale customers** who buy direct from Linear or through Linear's normal distribution channels. **Linear does not warrant this product to consumers.** Consumers should inquire from their selling dealer as to the nature of the dealer's warranty, if any. **There are no obligations or liabilities on the part of Linear corporation for consequential damages arising out of or in connection with use or performance of this product or other indirect damages with respect to loss of property, revenue, or profit, or cost of removal, installation, or reinstallation.** All implied warranties, including implied warranties for merchantability and implied warranties for fitness, are valid only until Warranty Expiration Date as labeled on the product. **This Linear Corporation Warranty is in lieu of all other warranties express or implied.** All products returned for warranty service require a Return Product Authorization Number (RPA#). Contact Linear Technical Services at 1-800-421-1587 for an RPA# and other important details.